

H.2.1. Lubrication of mountain-drive



Every mountain-drive has one slot screw on the outer side. Remove it to fill in the lubricant.

The Cargo version comes with 4 hex screws. One of them can be removed.